


The Lakeland ChemMAX® “Push-Fit” glove system is a simple method of attaching most types of chemical gloves to the garment sleeve through the use of two concentric rings.

The system has been fully tested to Type 3* and is certified with the garment (ChemMAX 1,2, or 3). Garments can be supplied with gloves attached or the ring system can be purchased separately so that customers may attach their own choice of glove.

* Type 3: EN 14605: 2005: Strong chemical splash and spray

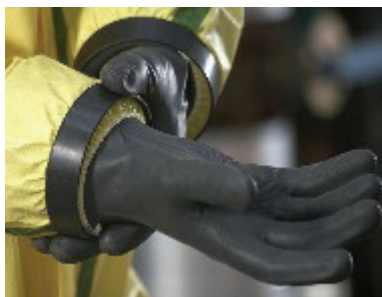

FITTING INSTRUCTIONS


1.



Pull the cuff of the glove over the white ring - insert the narrower end of the ring first. Pull the cuff over the full length of the ring.



2.

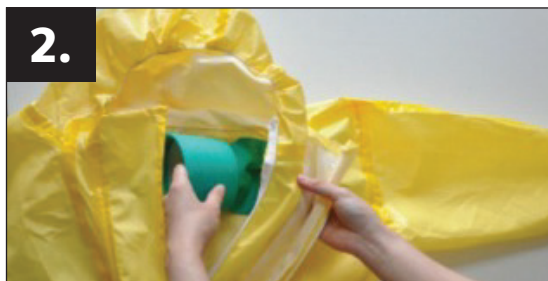

Push the glove with ring into the garment sleeve. Ensure the correct glove is used for each sleeve and that the palm of the glove faces the front of the garment.



3.



Holding the sleeve behind the inner ring slide the black ring over the glove and on to the garment sleeve. Push tightly over the inner ring and ensure the over the lip of the inner ring sleeve hem remains hooked



4.



Ensure both rings are attached securely and correctly to each sleeve.

CONTENTS OF BOX:

5 sets of Push-Fit Glove Rings (10 White, 10 Black), Instructions for Use sheet.

ChemMAX® 1 Coverall and Gloves are NOT included.

CARE OF PRODUCTS:

- Ensure product is not damaged before use - always carry out a physical check before using the product(s).
- These products may be suitable for re-use providing that suitable de-contamination procedures are adhered to and that there is no physical damage to any piece of the system.
- These products should not be repaired if damaged, please dispose of according to local requirements.
- Store in normal conditions: keep cool and dry and away from direct sunlight.
- Not suitable for use in extremely low temperatures (sub-zero) or temperatures higher than 100°C.
- Keep away from naked flames and high heat sources.
- Selection of the appropriate product for protection is the users responsibility.

CARE SYMBOLS:



TESTING ACCORDING TO THE METHOD DEFINED IN ISO 17491-3:2008
(Type 3: EN 14605: 2005: Strong chemical splash and spray)

TEST SPOTS AND LEAKAGE AREAS

Test spots and leakage areas:

= test spot

= leakage area

..... = seam/join

All test spots were at the seams/join between the glove and the suit material.
No leakage stains were detected on any of the suits tested.

LEAKAGE OF LIQUID INTO CLOTHING

Suit	1. Calibration stain (cm²)	2. Total leakage stain (cm²)	Ratio of 1 to 2
ChemMax® 1 CT1S428G	9.45	0	-
ChemMax® 2 CT2S428G	9.45	0	-
ChemMax® 3 CT3S428G	9.45	0	-

Protect Your People™

For further information see www.lakeland.com/europe or contact sales-europe@lakeland.com
No information provided is intended to guarantee product suitability for any specific application:
It is always the users final responsibility to ensure product suitability.

Lakeland Industries Europe Ltd T/A Lakeland Fire + Safety, Leltex House, Longley Lane, Manchester, M22 4SY, UK.
UK Company Registration No: 4500660

